



1

Step 1: Fold small lip 180°
 Step 2: Fold outer lip (approx.) 180°

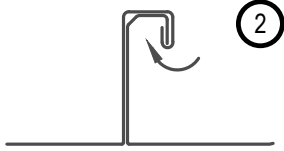




2

Step 3: Notch zee closure.
 Step 4: Apply two rows of butyl tape to underside of zee.

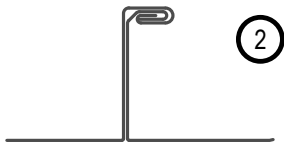

2

Step 5: Install zee closure.
 Step 6: Seal all contact points of zee and panel legs. Also seal over top of panel leg.

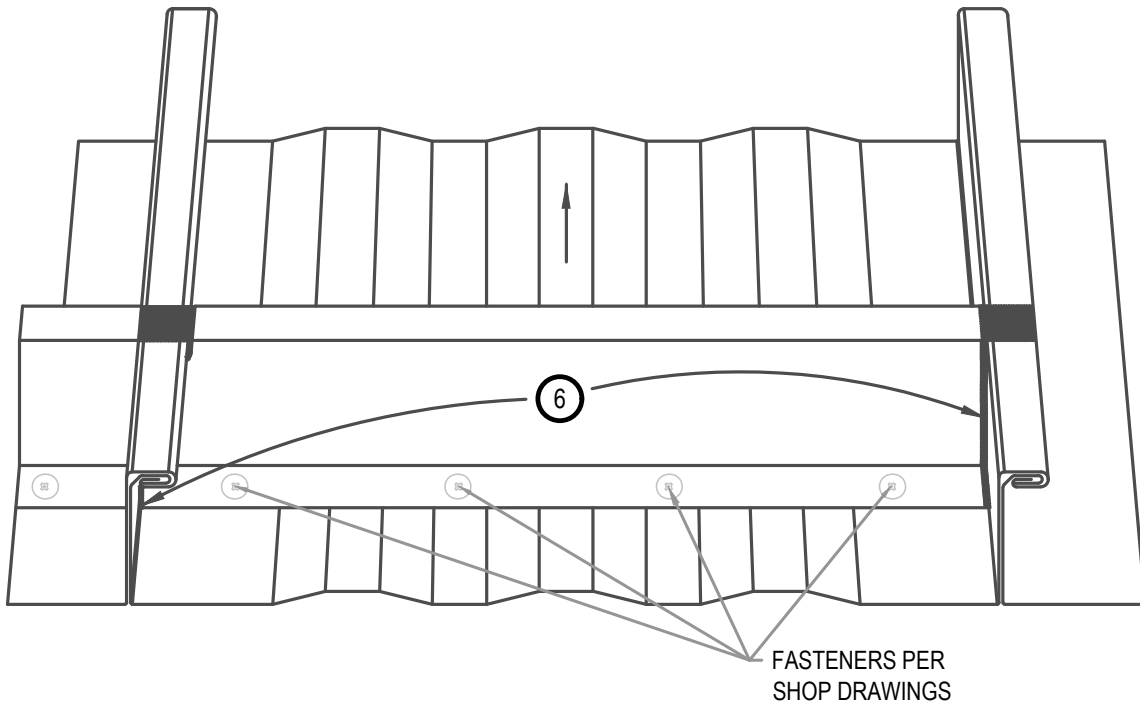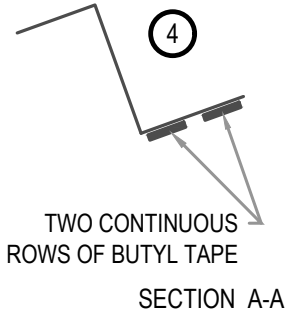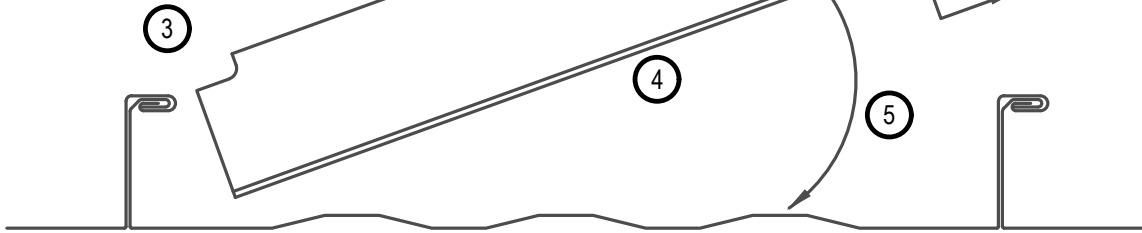

ARCHITECTURAL Z INSTALLATION GUIDE

• **PROVEN** • **DEPENDABLE** • **SUSTAINABLE** •
METAL ENVELOPE SYSTEMS SINCE 1988

WWW.DMIMETALS.COM

Detail:

DL20 12-00-W

Issue/Rev Date:

01/17

Scale:

3"=1'-0"