
NOTE

DO NOT ATTACH INTO SOLID SUBSTRATE BELOW.
BOOT SHALL NOT INTERSECT STANDING SEAM VERTICAL LEG. INSTALL IN FLAT AREA OF PANEL ONLY.
IF USING A SQUARE BOOT DETAIL BE SURE TO SET BOOT IN A DIAGONAL OR DIAMOND TO ALLOW WATER FLOW.



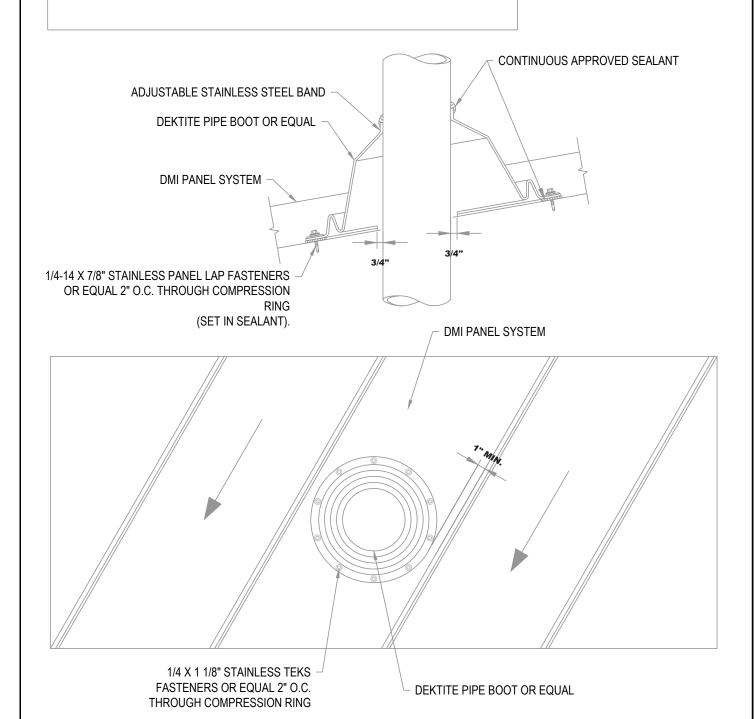

ARCHITECTURAL PIPE BOOT DETAIL

SL20 10-00-W

• PROVEN • DEPENDABLE • SUSTAINABLE • METAL ENVELOPE SYSTEMS SINCE 1988

WWW.DMIMETALS.COM

Issue/Rev Date:

Scale:

01/17

3"=1'-0"